


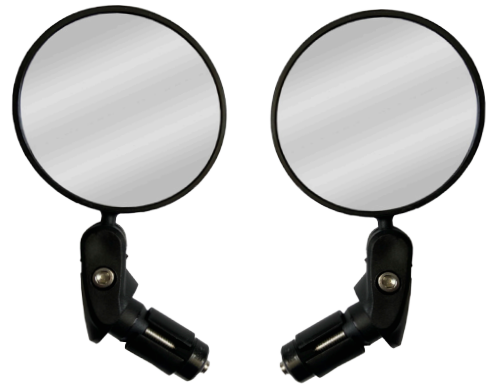

Mirrors Part #7004



Included

(2)- Mirrors with mounting hardware

(1)- 5mm Allen Wrench


(1) - 4mm Allen Wrench

The Side Mirrors can be installed on any model of Elevate E-Bikes. There is a slight difference between bikes with leather hand grips and bikes with rubber hand grips.

STEP 1


Note: Steps 1-3 are for leather hand grips. For Rubber hand grip installation flip paper over.

Remove the plug at the end of the hand grip. This can be removed without taking off the entire leather grip.

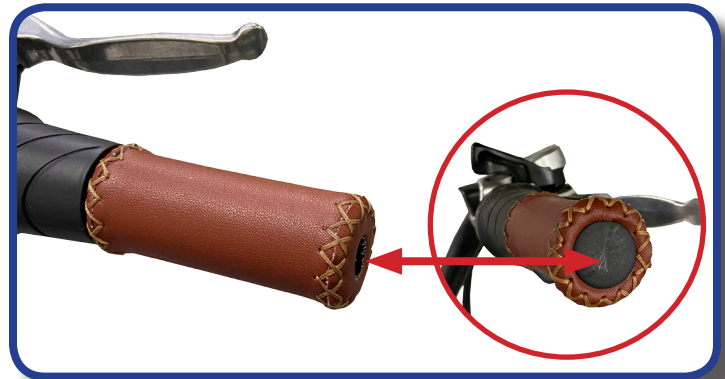


STEP 2

With the plug removed, insert the mirror.

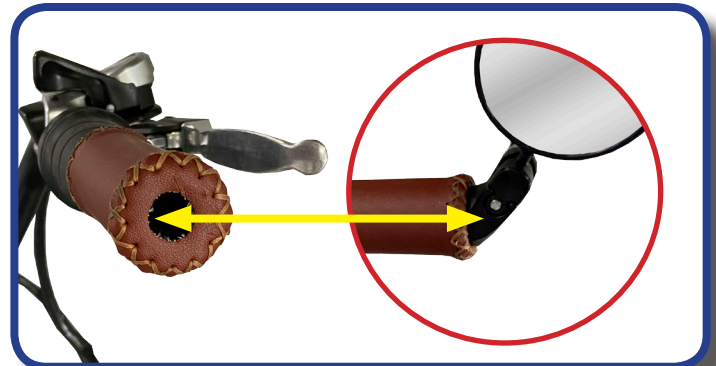

STEP 3

Use the provided **5mm Allen wrench** to tighten the expansion plug in the handlebar. Once tightened, use the smaller **4mm Allen wrench** to set the mirror to the desired position. Repeat steps 1-3 on opposite handle bar.

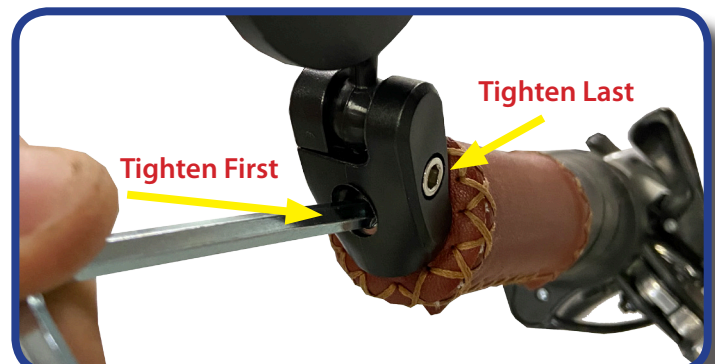

BE SURE TO REMOVE FILM BEFORE USING

STEP 4


Note: Steps 4-7 are for Rubber hand grips. For Leather hand grip installation flip paper over.

If your rubber hand grips don't have a cap on the end, you will need to use a cutting tool. With a cutting tool, carefully create an opening at the end of the hand grip.




STEP 5

If your rubber hand grips have a plug on the end, remove the plug. It can be removed without taking off the entire rubber hand grip.

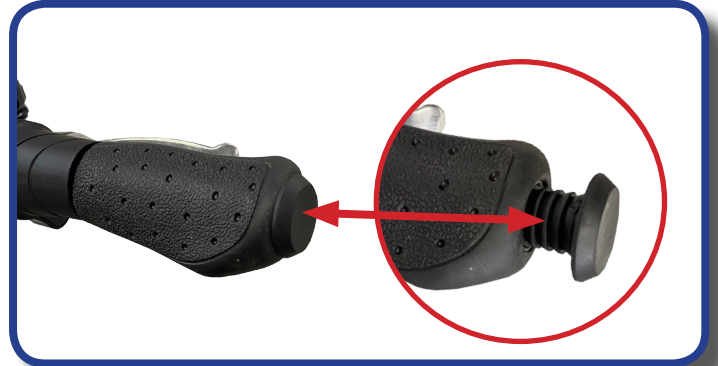

STEP 6


With the plug removed, insert the mirror.

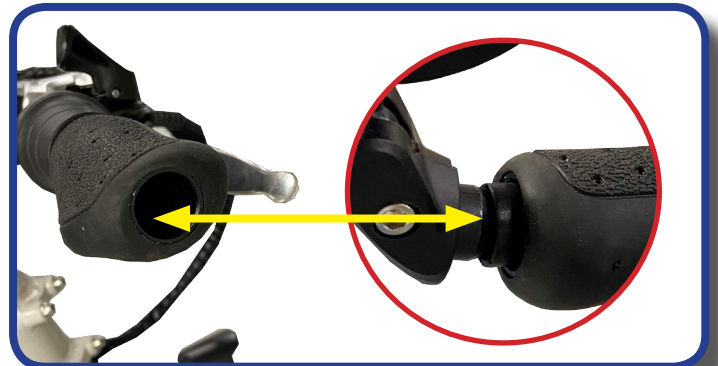

STEP 7

Use the provided **5mm Allen wrench** to tighten the expansion plug in the handlebar. Once tightened, use the smaller **4mm Allen wrench** to set the mirror to the desired position. Repeat steps 1-3 on opposite handle bar.

BE SURE TO REMOVE FILM BEFORE USING

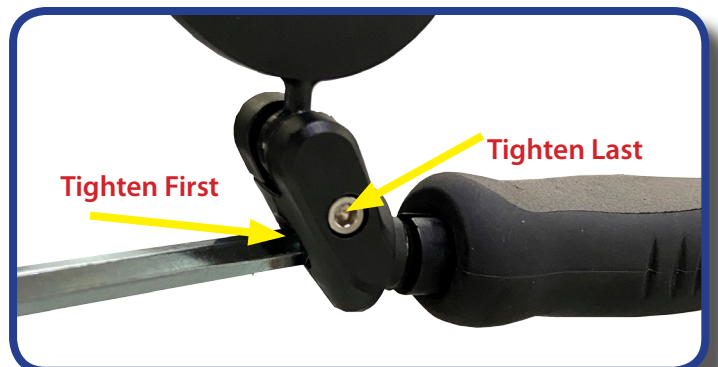

INSTALLATION COMPLETE