

ELEVATE E-BIKES

Phone Holder Part #7005



Tools Needed

#1 Phillips Screwdriver

Included




Phone Holder

***** The phone holder can be installed on any Elevate E-Bike *****

STEP 1

NOTE: This Phone holder will not hold any phone over 3.5 inches wide.

Remove and retain the screw from the clamp, using a 1# Phillips Screwdriver.

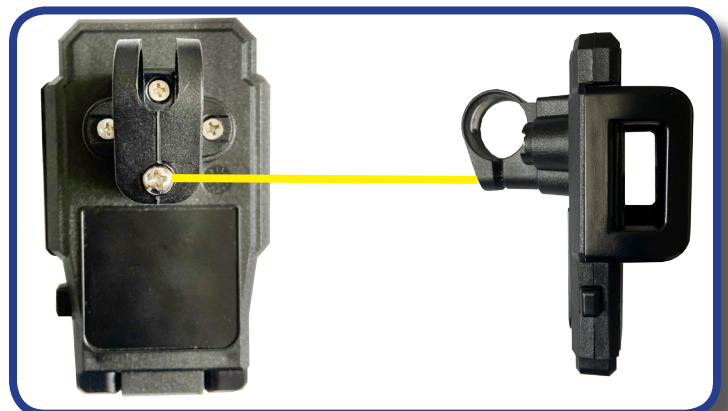


STEP 2

Place the clamp around the handlebars. insert the retained screw from Step 1, then tighten with a #1 Phillips head screwdriver.



STEP 3

To insert phone, press the button on the side to release the side clamps and unfold the two mounts at the bottom for the phone to rest on.

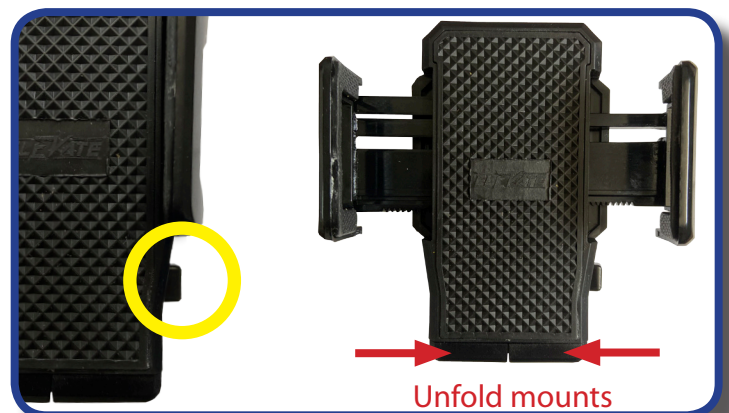

STEP 4

Place the Phone in the holder, standing on the two mounts. Squeeze clamps around phone until snug.

NOTE: To release the phone, press the button on the side to release the clamp and remove the phone.

INSTALLATION COMPLETE

